



User Manual

## *CODESYS Firmware Update*

This manual provides instructions about how to update the CODESYS firmware.

UM023001E\_20230428



**Step 1.** Launch Utility Manager and then select the corresponding model type.



**Step 2.** Navigate to [Maintenance] tab and select [CODESYS Firmware Upgrade].




**Step 3.** Specify the HMI whose OS is to be updated using the HMI IP (LAN2) or HMI name.

**Step 4.** Browse for the directory of the firmware file.

**Step 5.** Enter the system password on the HMI.

**Step 6.** Click [Update]. During the update process, please do not turn off the HMI and keep it connected.

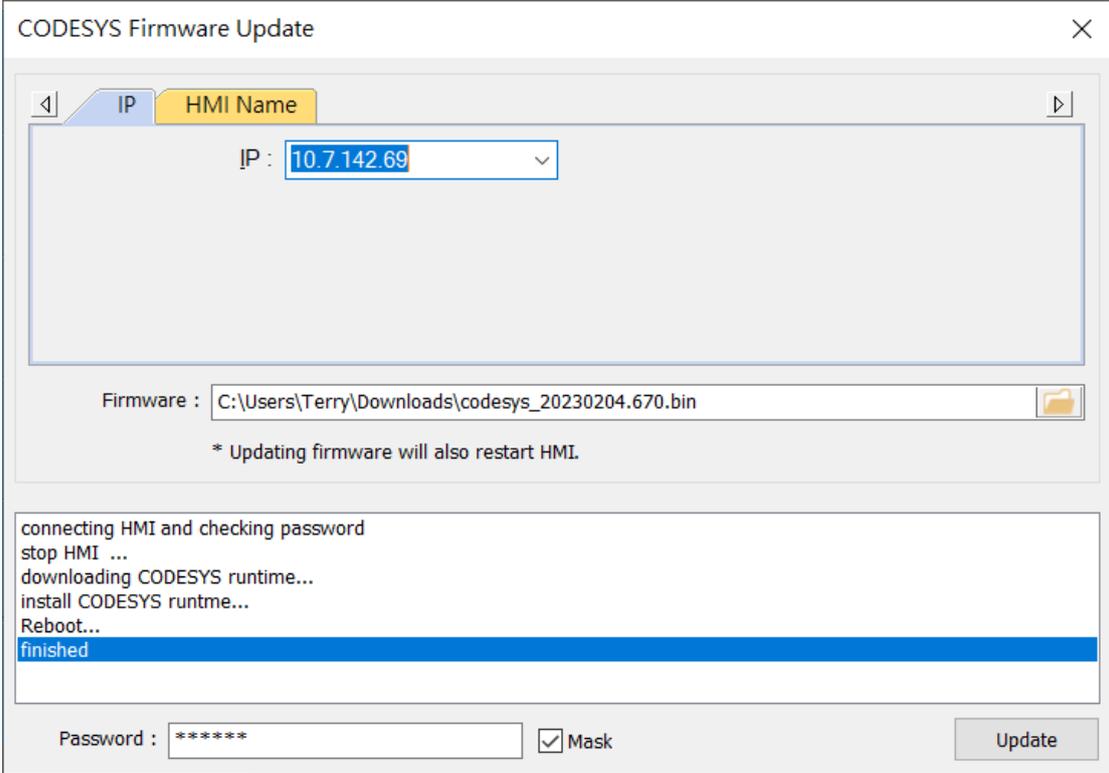

CODESYS Firmware Update

IP HMI Name

IP : 10.7.142.69

Firmware : C:\Users\Terry\Downloads\codesys\_20230204.670.bin

\* Updating firmware will also restart HMI.

connecting HMI and checking password  
stop HMI ...  
downloading CODESYS runtime...  
install CODESYS runtime...  
Reboot...  
finished

Password : \*\*\*\*\*  Mask